


Spare parts list (e-pac)

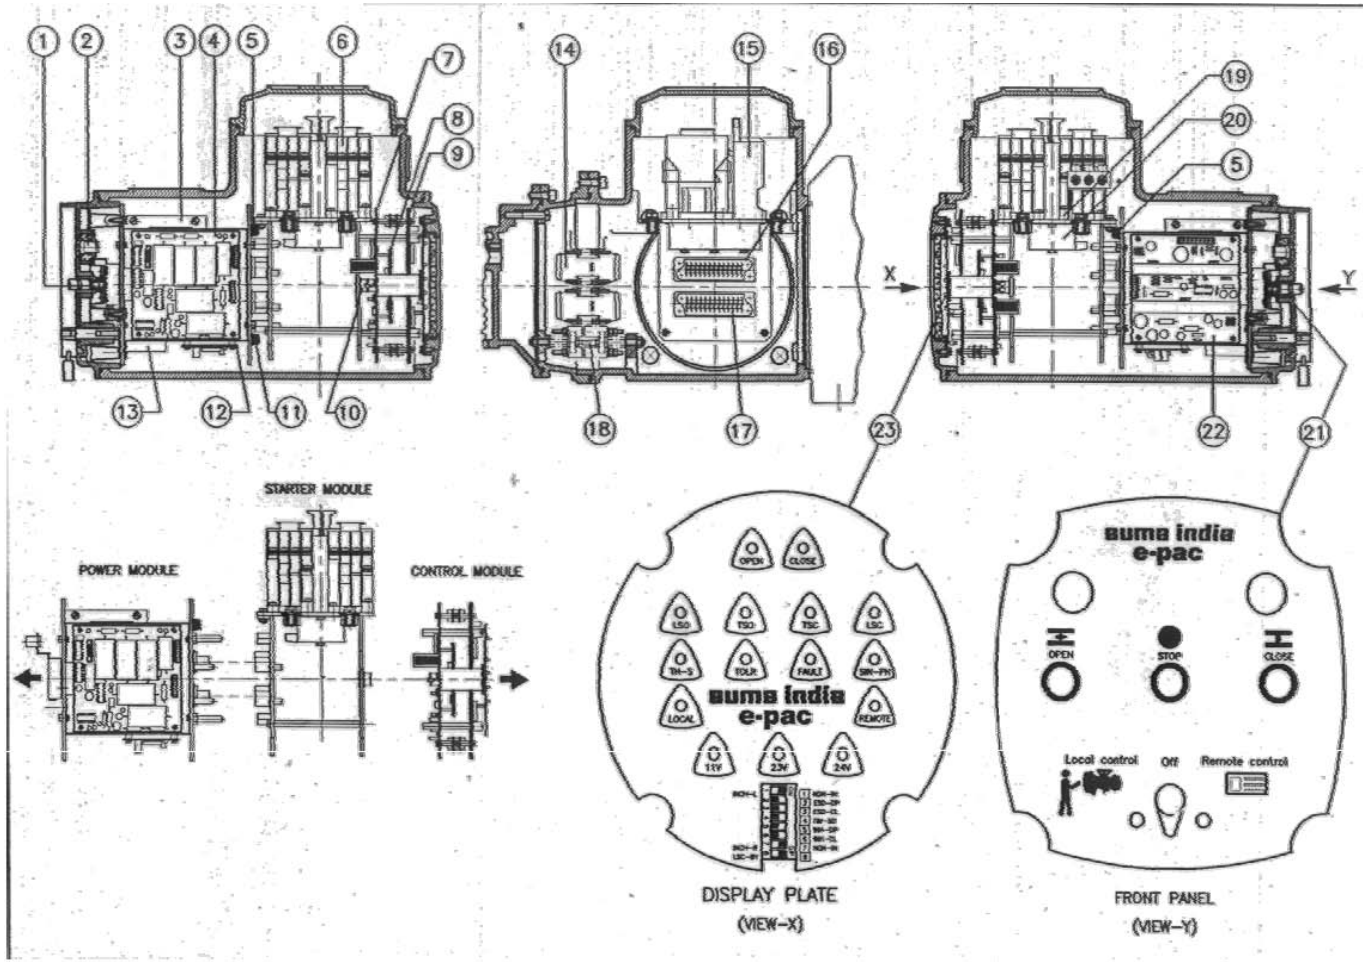

Item No.	Particulars
①	Local push buttons (For Open-Stop-Close)
②	Indication LED (For Open & Close)
③	Control transformer
④	Single phase board (Optional)
⑤	FS2 (Fuse 100mA)
⑥	Reversing contactors or thyristors
⑦	Logic board-1
⑧	Logic board-2
⑨	Interface & Display board
⑩	C8F Inter connection connector (Between cable tray & CM)
⑪	FS1 (Fuse 250mA)
⑫	Phase discriminator board
⑬	Mode switch
⑭	32 Pin control Plug & Socket
⑮	Thermal over load relay (Optional)
⑯	C16F Inter connection connector (Between cable tray & PM)
⑰	C15F Inter connection connector (Between cable tray & PM)
⑱	Motor Plug & Socket
⑲	Terminal block (3 Phase IN)
⑳	Current transformer assembly
㉑	Actuator front panel
㉒	Power supply board
㉓	Display plate